

WISE 无线触摸屏接收机控制码对应表

通讯参数	波特率：9600
	数据位：8
	停止位：1
	校验位：无
中控机程序键码(变化)	接收机控制代码
1	02 04 00 01 03 05
2	02 04 00 10 02 03 06
3	02 04 00 10 03 03 07
4	02 04 00 04 03 00
5	02 04 00 05 03 01
6	02 04 00 10 06 03 02
7	02 04 00 07 03 03
8	02 04 00 08 03 0C
9	02 04 00 09 03 0D
10	02 04 00 0A 03 0E
11	02 04 00 0B 03 0F
12	02 04 00 0C 03 08
13	02 04 00 0D 03 09
14	02 04 00 0E 03 0A
15	02 04 00 0F 03 0B
16	02 04 00 10 10 03 14
17	02 04 00 11 03 15
18	02 04 00 12 03 16
19	02 04 00 13 03 17
20	02 04 00 14 03 10
21	02 04 00 10 15 03 11
22	02 04 00 16 03 12
23	02 04 00 17 03 13
24	02 04 00 18 03 1C
25	02 04 00 19 03 1D
26	02 04 00 1A 03 1E
27	02 04 00 1B 03 1F
28	02 04 00 1C 03 18
29	02 04 00 1D 03 19
30	02 04 00 1E 03 1A
31	02 04 00 1F 03 1B
32	02 04 00 20 03 24
33	02 04 00 21 03 25



34	02 04 00 22 03 26
35	02 04 00 23 03 27
36	02 04 00 24 03 20
37	02 04 00 25 03 21
38	02 04 00 26 03 22
39	02 04 00 27 03 23
40	02 04 00 28 03 2C
41	02 04 00 29 03 2D
42	02 04 00 2A 03 2E
43	02 04 00 2B 03 2F
44	02 04 00 2C 03 28
45	02 04 00 2D 03 29
46	02 04 00 2E 03 2A
47	02 04 00 2F 03 2B
48	02 04 00 30 03 34
49	02 04 00 31 03 35
50	02 04 00 32 03 36
51	02 04 00 33 03 37
52	02 04 00 34 03 30
53	02 04 00 35 03 31
54	02 04 00 36 03 32
55	02 04 00 37 03 33
56	02 04 00 38 03 3C
57	02 04 00 39 03 3D
58	02 04 00 3A 03 3E
59	02 04 00 3B 03 3F
60	02 04 00 3C 03 38
61	02 04 00 3D 03 39
62	02 04 00 3E 03 3A
63	02 04 00 3F 03 3B
64	02 04 00 40 03 44
65	02 04 00 41 03 45
66	02 04 00 42 03 46
67	02 04 00 43 03 47
68	02 04 00 44 03 40
69	02 04 00 45 03 41
70	02 04 00 46 03 42
71	02 04 00 47 03 43
72	02 04 00 48 03 4C
73	02 04 00 49 03 4D
74	02 04 00 4A 03 4E



75	02 04 00 4B 03 4F
76	02 04 00 4C 03 48
77	02 04 00 4D 03 49
78	02 04 00 4E 03 4A
79	02 04 00 4F 03 4B
80	02 04 00 50 03 54
81	02 04 00 51 03 55
82	02 04 00 52 03 56
83	02 04 00 53 03 57
84	02 04 00 54 03 50
85	02 04 00 55 03 51
86	02 04 00 56 03 52
87	02 04 00 57 03 53
88	02 04 00 58 03 5C
89	02 04 00 59 03 5D
90	02 04 00 5A 03 5E
91	02 04 00 5B 03 5F
92	02 04 00 5C 03 58
93	02 04 00 5D 03 59
94	02 04 00 5E 03 5A
95	02 04 00 5F 03 5B
96	02 04 00 60 03 64
97	02 04 00 61 03 65
98	02 04 00 62 03 66
99	02 04 00 63 03 67
100	02 04 00 64 03 60
101	02 04 00 65 03 61
102	02 04 00 66 03 62
103	02 04 00 67 03 63
104	02 04 00 68 03 6C
105	02 04 00 69 03 6D
106	02 04 00 6A 03 6E
107	02 04 00 6B 03 6F
108	02 04 00 6C 03 68
109	02 04 00 6D 03 69
110	02 04 00 6E 03 6A
111	02 04 00 6F 03 6B
112	02 04 00 70 03 74
113	02 04 00 71 03 75
114	02 04 00 72 03 76
115	02 04 00 73 03 77



116	02 04 00 74 03 70
117	02 04 00 75 03 71
118	02 04 00 76 03 72
119	02 04 00 77 03 73
120	02 04 00 78 03 74
121	02 04 00 79 03 7D
122	02 04 00 7A 03 7E
123	02 04 00 7B 03 7F
124	02 04 00 7C 03 78
125	02 04 00 7D 03 79
126	02 04 00 7E 03 7A
127	02 04 00 7F 03 7B
128	02 04 00 80 03 84
中控机程序键码(固定)	接收机控制代码
245	02 04 00 F5 03 F1
246	02 04 00 F6 03 F2
247	02 04 00 F7 03 F3
248	02 04 00 F8 03 FC
249	02 04 00 F9 03 FD
250	02 04 00 FA 03 FE
251	02 04 00 FB 03 FF
252	02 04 00 FC 03 F8
253	02 04 00 FD 03 F9
254	02 04 00 FE 03 FA
注意事项:	建议手动输入代码，避免复制出现不可见字符 无法控制现象!